



Adding key fobs to a Honeywell Galaxy Alarm Panel

- Enter manager code. Display shows 10=setting.
- Type 42, then ENT. Display shows 42=users. Press Ent.
- Display shows 1=users. Press Ent
- Type 01 ENT. That will take you to user 1. At the end you may see a “m”
- Keep pressing “A” until you get to a user that doesn’t have a small m at the end OR until you find the user that you wish to allocate a fob to. (The m indicates “Max Token” and shows that the user has a fob allocated to them)
- When you find a blank OR the user you wish to allocate a fob to, Press Ent.
- Type 7, then ENT. Display shows 7=card no. Press Ent
- Press the Number “1” & the “A” key together and at the same time. You will hear a double beep.
- Hold the new fob against the reader and you will see the numbers of the token entered automatically, you will hear another double beep. Press Ent.
- Press the A Key until the display says “ 8=max function”. Press Ent.
- Type the number 12 so that it now shows 12= timed set. Press Ent.
- Press “ESC” multiple times until you go back to the normal display.
- Test the new fob by holding it against panel until “Timed Set” appears, this shows that the fob has been programmed in – Press “Esc” to abort.